



Spectrum and Profil 2 Frames - Instructions for Use and Installation

For use with the Riva 53, 67 Conventional and Riva 53, 67 and 70 Balanced Flue Fires

USER INSTRUCTIONS

CONTROLS & BATTERIES ACCESS

- The **Spectrum** frame has a drop-down door at the foot of the frame providing access to the controls and batteries.
- The lower panel of the **Profil 2** frame lifts off to give access to the batteries and controls.

Details of the fire's controls (and *Replacing Batteries*, if applicable) are given in the *User* section of the fire's *Instruction* manual.

CLEANING THE FRAME

The frame should be cleaned using a damp cloth and buffed with a lint free duster.

INSTALLATION INSTRUCTIONS

Covering the frames 8739 (Spectrum) & 8492 (Profil)


These instructions are supplementary to and must be read in conjunction with the *Installation Instructions* supplied with the gas fire. Read both thoroughly before installing the fire.

Fitting of this frame is to be carried out after the fire has been fully installed but before the commissioning tests.

1. FITTING EITHER SPECTRUM OR PROFIL 2

Both frames are pre-assembled and supplied separately to the Riva fire

- 1.1 Unpackage the frame and set the two fixing screws to one side.
- 1.2 Take notice of the three locating areas (joggles) situated at the top of the Riva fire as these secure the back of the frame to the fire, Diagram 1.

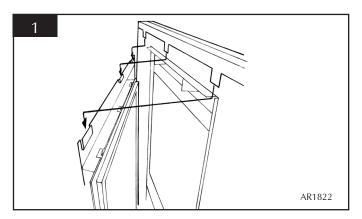

- 1.3 On the back of either the Spectrum or Profil 2 frames there are three lugs, Diagram 1.
- 1.4 You need to locate the frame lugs over and down onto the fire's joggles so that the lugs fit flush with the fire's front.

Important: Ensure all three lugs have engaged. See diagram 1.

1.5 Both the Spectrum and Profil 2 are secured by brackets at the bottom inside of the fire and tabs on the lower side of each frame:

Spectrum

• To access the mounting screws on the Spectrum, open the drop down door at the foot of the frame.


Profil 2

• To access the mounting screws on the Profil 2, lift the lower panel up and away from the fire.

You can now view the brackets on the lower right and left-hand inside of the fire, Diagram 3.


For Riva 53 Fire Balanced Flue model only:

1.6 Attach the brackets packaged with this frame before attaching the frame, Diagram 2.

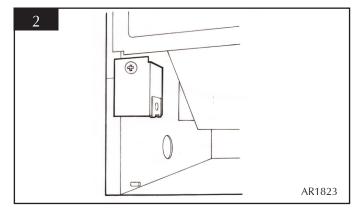

For all Models:

- 1.7 Align the hole in the tab with each hole in the fire's bracket:
 - Insert screws supplied with frame
 - Tighten

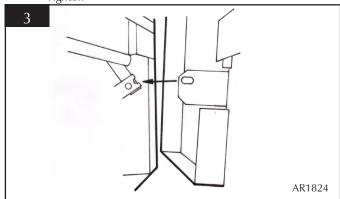

2. COMMISSIONING

- 2.1 Continue with the commissioning tests detailed in the *Installation Instructions* supplied with the fire.
- 2.2 Ensure that this supplementary sheet is attached to the *Installation Instructions* and leave with the user.