STOVAX

REPLACING DOOR GLASS


RIVA VISION SMALL, MIDI & MEDIUM WOOD & MULTI-FUEL

1. TO REMOVE GLASS


1.1 Remove door from the appliance by pushing the right hand door handle upwards to release catch and lifting door free of hinge blocks on the left hand side of the appliance.

Place door, glass facing down, on a clean, stable, flat surface.

1.2 Remove fixing nuts and washers around edge of door frame (see Diagram 1).

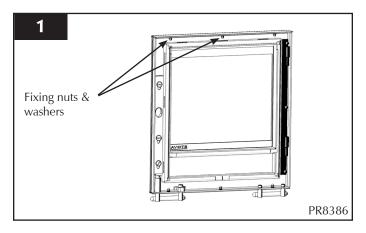

- 1.3 Holding glass and frame together, turn door over so glass faces upward.
- 1.4 Carefully remove glass clamps (see Diagram 2) from top and bottom edges of frame. The bottom clamp should be lifted upward to clear the door handle and dummy handle (see Diagram 3).

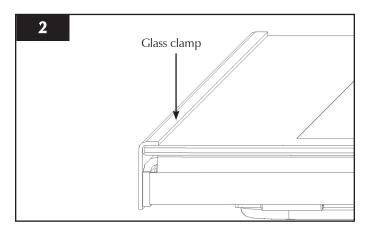

To free glass if sealant has been used, carefully run a sharp knife between the glass and the glass gasket beneath. Always cut away from the body.

- 1.5 Carefully remove damaged glass and dispose of safely.
- 1.6 Check quality of glass gasket and replace if necessary.


If sealant was used, reapply, ensuring new sealant is placed only where originally found. DO NOT place sealant across top or bottom of door.

2. TO FIT NEW GLASS

- Re-attach bottom glass clamp, placing notches over door handle and dummy handle.
- 2.2 Carefully place new glass on door.

Ensure the Stovax logo is the right way up and the matt underside of the painted edge is face down (see Diagram 3).

Gently slide bottom edge of glass under bottom glass clamp.

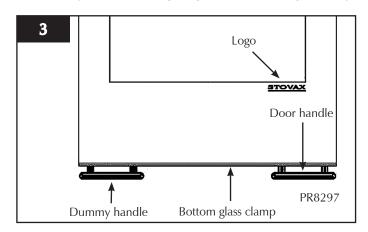

2.3 Carefully attach top glass clamp. **Gentle** pressure on the glass may be needed to achieve this.

Ensure glass is central to door.

2.4 Carefully turn door over, holding glass firmly, and place door glass side down. Re-attach nuts & washers.

DO NOT OVERTIGHTEN NUTS as this can cause the glass to crack.

2.5 Re-attach door.