Fire Your Imagination

STANDARD REMOTE CONTROL SYSTEM

QUICK START GUIDE TO OPERATION

PLEASE NOTE
This is a quick guide to using your Gazco fire. A more detailed explanation is found in the main Instructions for Use, Installation and Servicing.

PR1413 Issue 1 (November 2011)

Fire Your Imagination

Gazco Limited, Osprey Road, Sowton Industrial Estate, Exeter, Devon, England EX2 7JG
Tel: (01392) 261999 Fax: (01392) 444148 E-mail: info@gazco.com

A member of the Stovax Group

1. GENERAL

This leaflet is intended as a quick start guide only. Please read thoroughly the Instructions for Use, Installation & Servicing supplied with the appliance.

The appliance can be operated in two ways:

- Using the remote control handset.
- Using the touch pad control on the appliance.

IMPORTANT: THE CONTROL SYSTEM HAS A TWO-WAY COMMUNICATION FEATURE FOR ADDED SAFETY. A SHORT DELAY MAY BE EXPERIENCED AFTER OPERATING THE CONTROL BEFORE THE COMMAND IS ACTIVATED. THIS DELAY IS TO ENSURE THE RECEIVER HAS CONFIRMED THE REQUESTED COMMAND WITH THE HANDSET OR TOUCH PAD.

IMPORTANT - THE CONTROL SYSTEM HAS BEEN PROGRAMMED TO OPERATE ON CHANNEL 'A'. IN SOME INSTANCES MULTIPLE HOUSEHOLD APPLIANCES MAY HAVE ALSO BEEN SET TO OPERATE ON THE SAME CHANNEL. ALTHOUGH THIS HAS NO EFFECT ON THE SAFETY OF THE SYSTEM YOU MAY ENCOUNTER AN EXCESSIVE DELAY BETWEEN COMMANDS. IF THIS OCCURS PLEASE FOLLOW COMMISSIONING, SECTION 3 IN THE MANUAL SUPPLIED WITH THE APPLIANCE TO CHANGE THE CHANNEL.

NEVER LEAVE ANY COMBUSTIBLE MATERIALS WITHIN 1 METRE OF THE FRONT OF THE APPLIANCE.

IF THE FIRE IS EXTINGUISHED OR GOES OUT IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT IT.

2. QUICK START USING THE REMOTE CONTROL HANDSET

The remote control handset has been factory set to only communicate with the appliance it is supplied with. The appliance will not respond to any other remote control, even one from an identical appliance. In the event of a replacement handset being acquired, pairing of the handset with the appliance will need to be carried out. Please refer to the Commissioning section in the instructions supplied with the appliance.

Before using the remote control:

2.1 Ensure batteries are fitted in the handset - 2x AA 1.5v high quality alkaline (Duracell or similar).

DO NOT USE RECHARGEABLE BATTERIES.

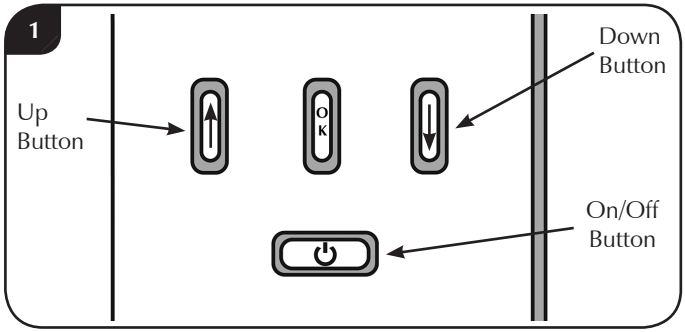

Each time a command from the handset is received by the appliance a beep will be emitted and the LED on the handset will briefly illuminate.

NOTE: In normal operating mode the LED on the remote control will flash approximately every 4 seconds to show that it is in communication with the appliance. After each command has been accepted the LED will cease flashing until the command has been carried out. Wait until the LED resumes flashing before giving another command.

To Switch ON:

2.2 To light the appliance using the **remote handset** press the On/Off (⏻) button followed directly by the OK button. The appliance will emit a beep to confirm the order has been received and the LED on the handset will briefly illuminate.

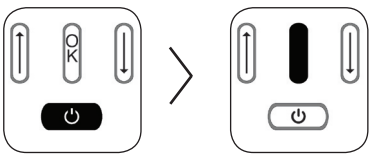

After the start up cycle has completed the appliance will light on the **high flame setting** (this can take up to 20 seconds).

To Decrease the Flame Height:

2.3 From the **high** flame setting press the DOWN (↓) button once to lower the flame to the **medium** setting.

2.4 From the **medium** flame setting press the DOWN (↓) button once to lower the flame to the **low** setting.

2.5 From the **low** flame setting press the DOWN (↓) button once to put the appliance in **Standby** mode (Pilot only).

To Increase the Flame Height:

2.6 To light the appliance when it is in **Standby** mode press the UP (↑) button once. **The appliance will light on the high flame setting.**

2.7 From the **low** setting press the UP (↑) button once to increase the flame setting to **medium**.

2.8 From the **medium** setting press the UP (↑) button once to increase the flame setting to **high**.

To Switch OFF:

2.9 To turn the appliance off press the On/Off (⏻) button once.

3. QUICK START USING THE TOUCH PAD CONTROL

The touch pad control is located adjacent to the battery holder behind the lower front cover or frame. Please refer to the Instructions for Use and Installation supplied with the appliance to gain access to the touch pad. The touch pad will appear as shown in Diagram 2.

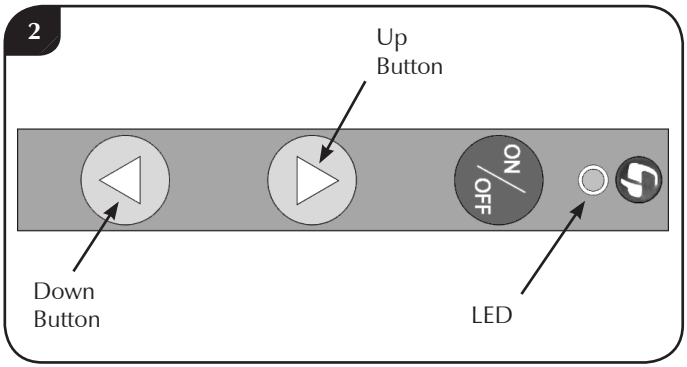

Each time a command from the touch pad is received by the appliance a beep will be emitted and the LED on the touch pad will briefly illuminate. A second beep and flash of the touch pad LED will confirm the command has been carried out. Wait for this confirmation before giving another command.

To Switch ON:

3.1 To light the appliance press the On/Off button once. The appliance will emit a beep to confirm the order has been received and the LED on the touch pad will briefly illuminate.

After the start up cycle has completed the appliance will light on the **high flame setting** (this can take up to 20 seconds). A **second beep and flash of the touch pad LED** will confirm the command has been carried out.

To Decrease the Flame Height:

3.2 From the **high** flame setting press the DOWN (◁) button once to lower the flame to the **medium** setting.

3.3 From the **medium** flame setting press the DOWN (◁) button once to lower the flame to the **low** setting.

3.4 From the **low** flame setting press the DOWN (◁) button once to put the appliance in **Standby** mode (Pilot only).

To Increase the Flame Height:

3.5 To light the appliance when it is in **Standby** mode press the UP (▷) button once. **The appliance will light on the high flame setting.**

3.6 From the **low** setting press the UP (▷) button once to increase the flame setting to **medium**.

3.7 From the **medium** setting press the UP (▷) button once to increase the flame setting to **high**.

To Switch OFF:

3.8 To turn the appliance off press the On/Off button once.

4. TROUBLESHOOTING

HANDSET NOT WORKING

If the appliance is not responding to the handset try the following:

4.1 Move the handset closer to the appliance.

NOTE: Try to avoid placing the handset a long distance from the appliance. It can take some time for the signal to return.

4.2 Replace the batteries in the handset.

NOTE: Communication between the handset and the appliance may take up to 2 minutes after batteries have been replaced.

If communication is not regained after this time the control unit and the handset may need pairing. Please refer to Commissioning, Section 2, in the manual supplied with the appliance.

NOTE: Only replace the handset batteries with high quality alkaline type AA 1.5V (Duracell or similar).

DO NOT USE RECHARGEABLE BATTERIES.

TOUCH PAD CONTROL NOT WORKING

If the appliance is not responding to the touch pad control:

4.3 Replace the batteries in the battery pack.

The battery pack is located in the base of the front of the appliance (for the specific location please refer to the User Instructions in the manual supplied with the appliance).

The battery pack contains 3 x C batteries. Replace exhausted batteries like for like (use high quality batteries, Duracell or similar).

DO NOT USE RECHARGEABLE BATTERIES.

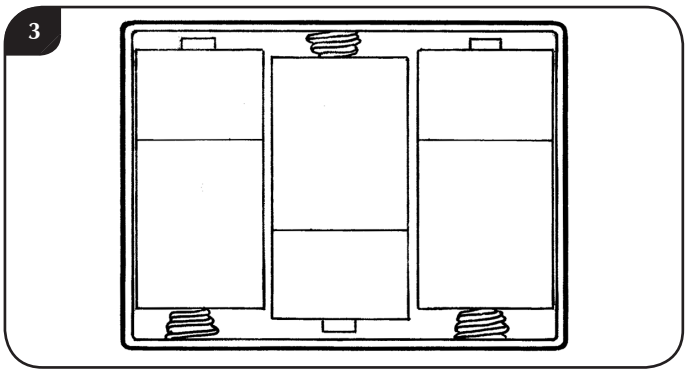

4.4 If the appliance still fails to operate consult your installer or Gazco dealer.